



The spacer has been press fit and can be adjusted without damaging either component.

While the pin is in the post, tap with a hammer to adjust the pin heighth.



Please note that this spacer is not welded onto the pin.



While the pin is in the post, tap with a hammer to adjust the pin heighth.







