


Instructions: PMB-01-7200

Note: We recommend using a removable thread-locking agent on all bolts.

ITEM #	PART #	DESCRIPTION	QTY
1	01-7200-TOP_revA	CARGO RACK TOP	1
2	70-7073_revA	SPACER 8X15.5X39	2
3	70-3870	BOLT M8X70 FLAT S/S	4

1. Remove the stock cargo rack and rearward spacers.
2. Place the rack top (item 1) on the bike with the spacers (item 2) between the rack and the rear fender at the rear mounting holes.
3. Install four M8 bolts (item 3) into the rack top.
4. Tighten the rack top.
5. Make sure that all bolts are tight and enjoy. Periodically check the mounting bolts to make sure they are tight.

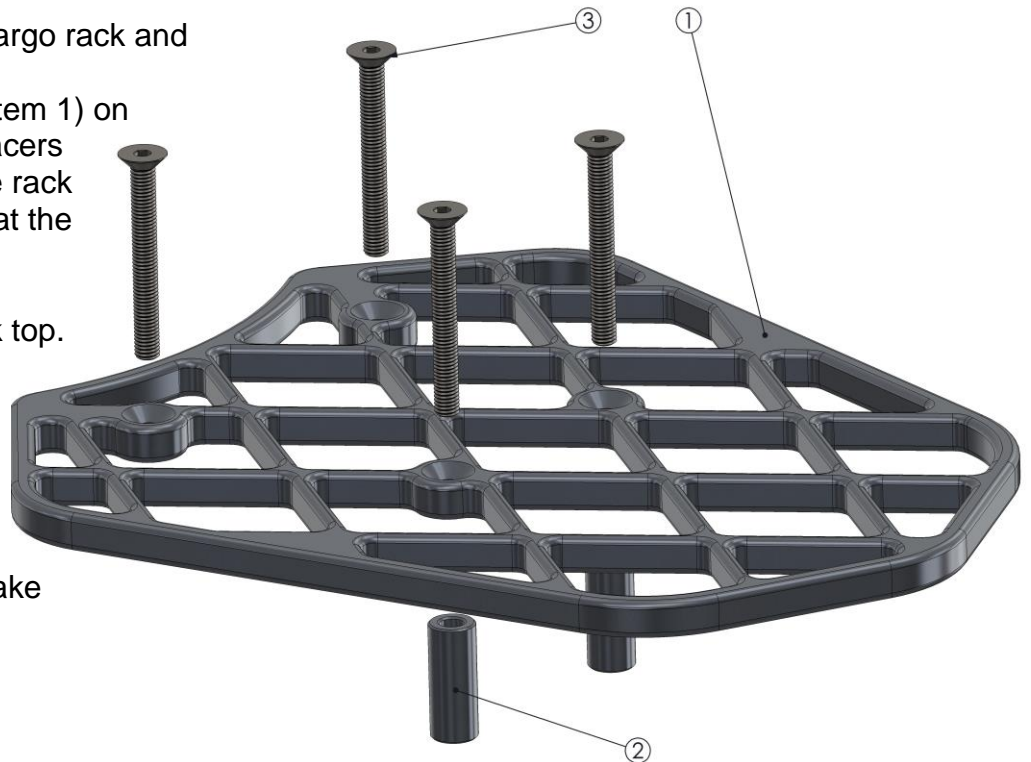

CAUTION: As with all racks on motorcycles they should not have excess amounts of weight put on them. Excess weight can damage the rear sub-frame of the motorcycle.

See our entire product line at promotobillet.com