



## Instructions – PMB-01-3016

Thank you for your purchase! We are confident that you will be pleased with the quality of our product.

### **Parts List:**

- 1-Kickstand
- 1-Bracket
- 1-M8x25 Bolt
- 1-M8x20 Bolt

**NOTE:** We recommend using a thread-locking agent on all bolt threads.

### **To install your new kickstand:**

1. Secure bike on a center stand.
2. Remove the frame protection plastic cover piece by removing the M5 bolts (Figure 1).
3. Remove the stock kickstand
4. Install kickstand on bike by using the supplied M8x25 flat head bolt in the bottom hole of the kickstand base. The bolt will go through the base, into the stock bolt location. **NOTE:** Do not fully tighten bolt.
5. Install top M8x20 bolt with adjoining clamp piece.
6. Fully tighten bolts from steps 4 and 5.
7. Print template (located on Pg. 3). Cut out the template by cutting on the “Template Cut Line.”
8. Tape the template to the frame protection plastic piece. Make sure to line up the edges of the template with the edges of the plastic (Figure 2).
9. Use the “Cut Line” on the template to mark and trim the plastic piece. **NOTE:** Trimming the plastic piece with the “Cut Line” should allow the plastic to fit around the kickstand, however the trimming might need to be modified to allow the plastic to fit according to personal preference.
10. Reattach the frame protection plastic cover piece and two M5 bolts. The frame protection plastic cover piece should flex a little.
11. Periodically check the kickstand leg pivot pin and all mounting bolts for tightness.

### **To prevent damage:**

- Clean and lubricate the kickstand pivot area after each ride! We recommend using a penetrating lube, such as WD-40. If necessary, you can remove the back cover plate for additional cleaning.
- Carefully position kickstand up and down.
- Do not start/sit on bike with the kickstand down.


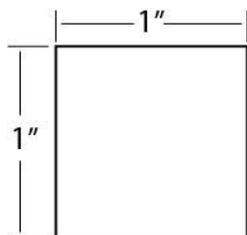


Figure 1



Figure 2



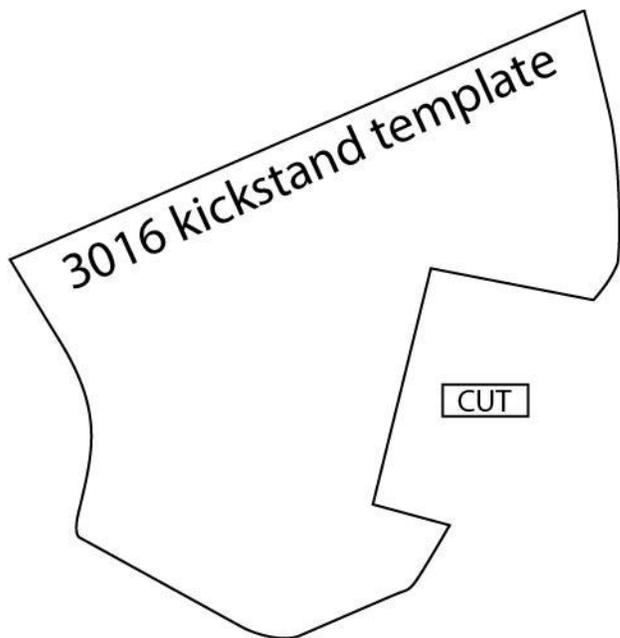

Scale check