

Instructions: 22-SP-020

Parts List: (1) skid plate, (1) plate, (2) M6 bolts, (1) M6 tap



This installation requires drilling and tapping holes in your Linkage Guard. If you do not feel that you can safely drill and tap hole in your Linkage Guard, have your dealer drill and tap it for you. Cut template is included to achieve a perfect fit.

Installation Instructions:

1. Carefully cut out the paper template on the dotted line.
2. Place and align the template flush with the edges as shown.
3. Drill hole using 5MM or #9 (.196) drill bit 5/8" deep. **Make sure to do this perpendicular to the Linkage Guard.**
4. Use the tap supplied and tap the holes that you just created.
5. Install skid plate with the supplied bolts and plate to the linkage guard. We recommend using thread lock on all bolts.



CAREFULLY CUT OUT PAPER
TEMPLATE

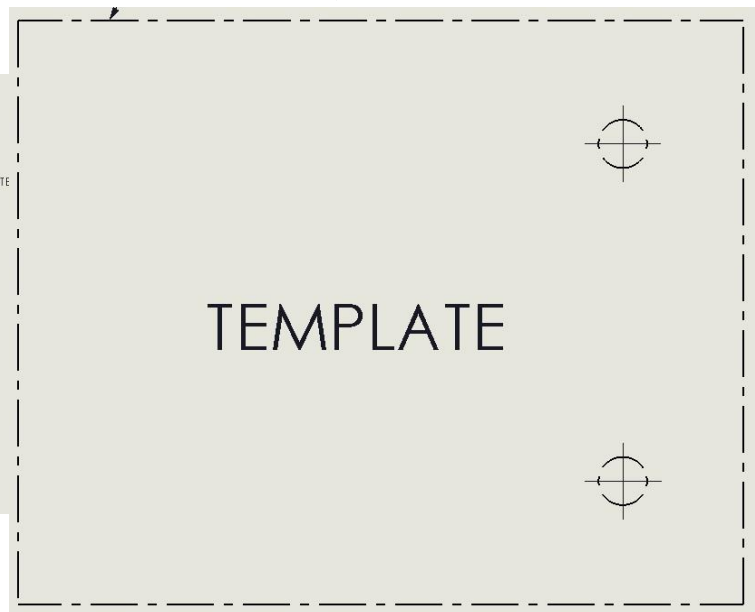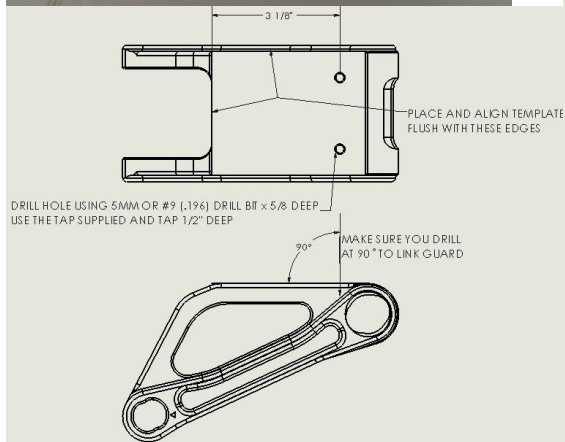

See our entire product line at promotobillet.com